

DATE: 12-05-2000

FIG. 1

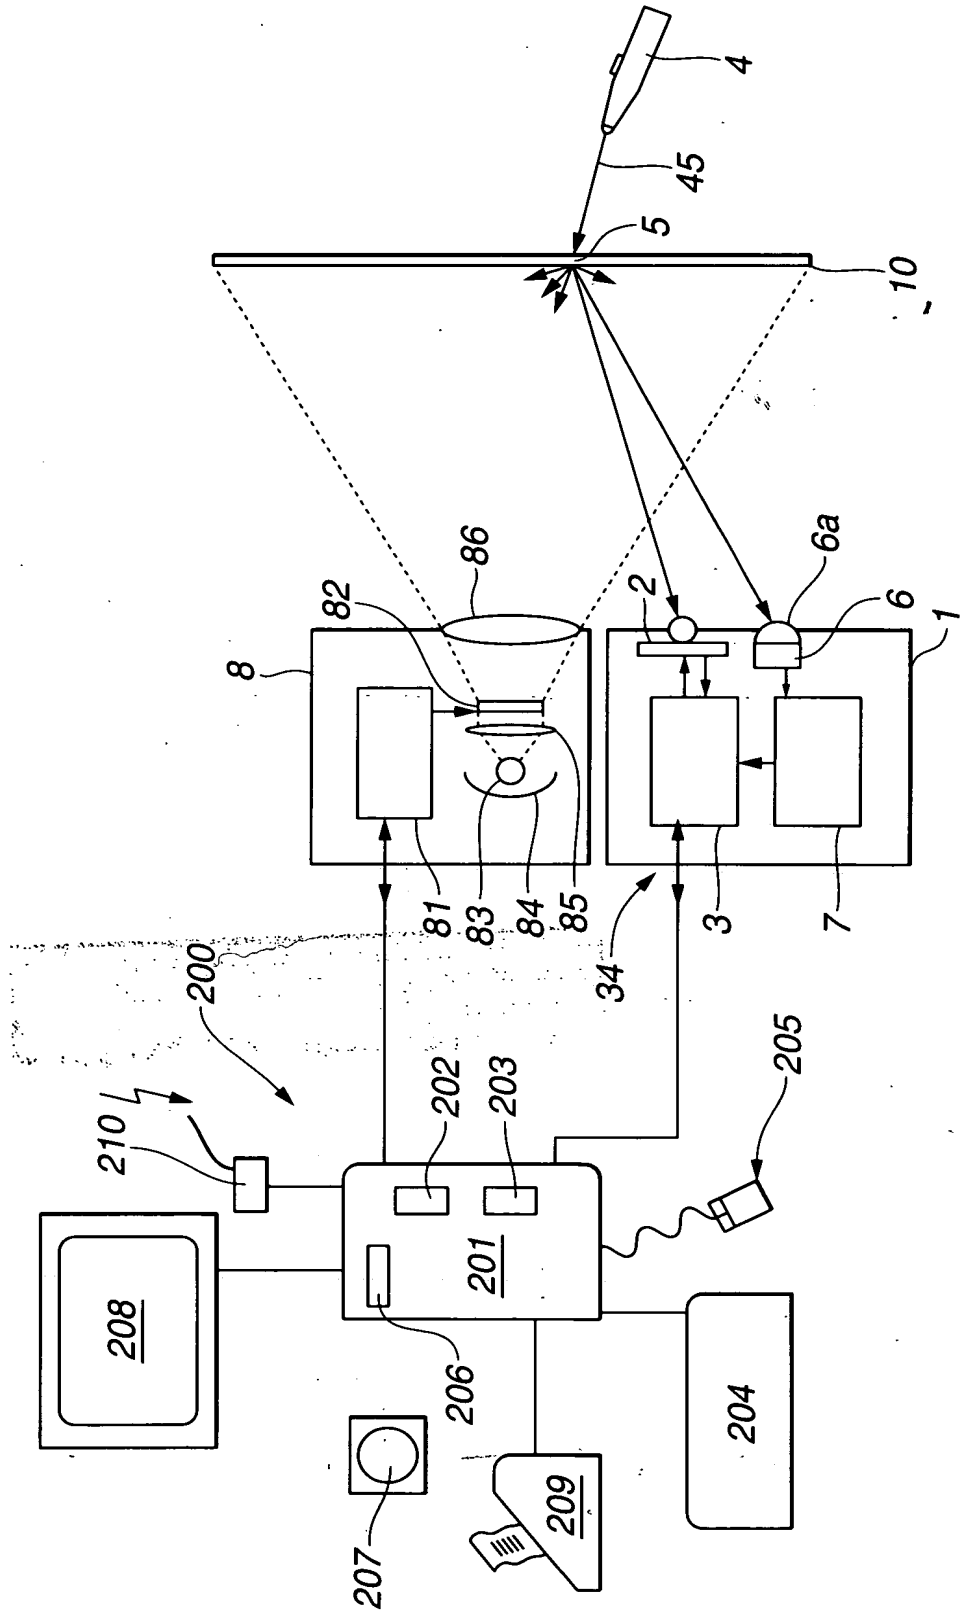


FIG.2

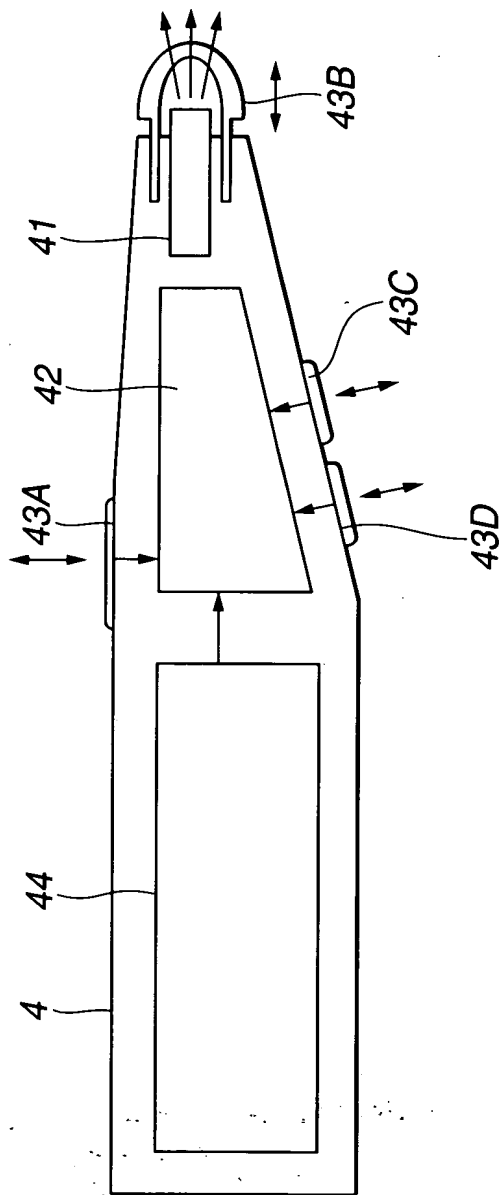


FIG.3

SWITCH A	SWITCH B	SWITCH C	SWITCH D	LIGHT EMISSION	PEN DOWN	PEN BUTTON
x	x	-	-	OFF	OFF	OFF
0	x	x	x	ON	OFF	OFF
0	x	0	x	ON	ON	OFF
0	x	x	0	ON	OFF	ON
0	x	0	0	ON	ON	ON
0	0	-	-	ON	ON	ON
x	0	-	-	ON	ON	OFF

FIG. 4

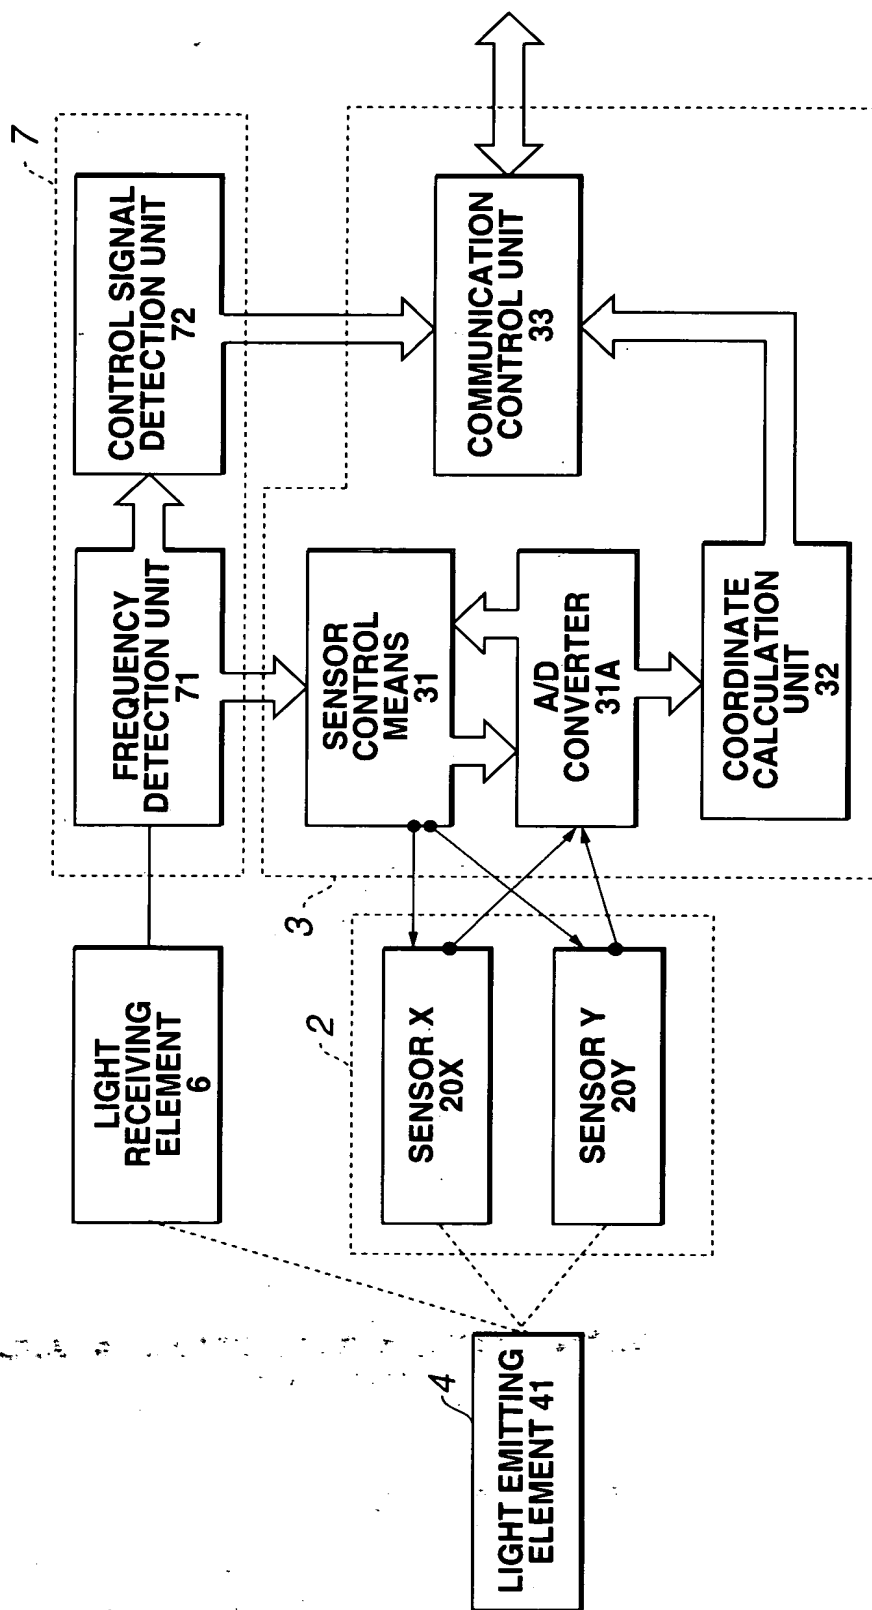


FIG.5

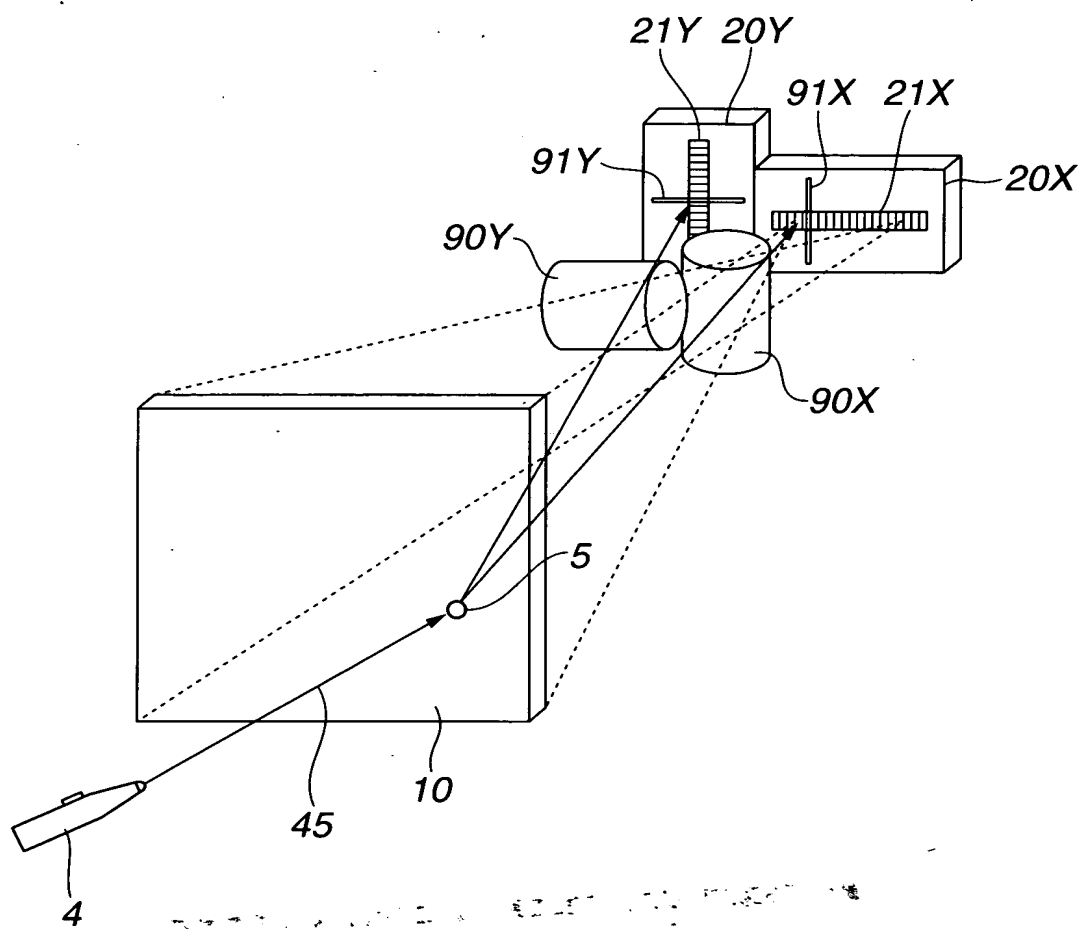


FIG.6

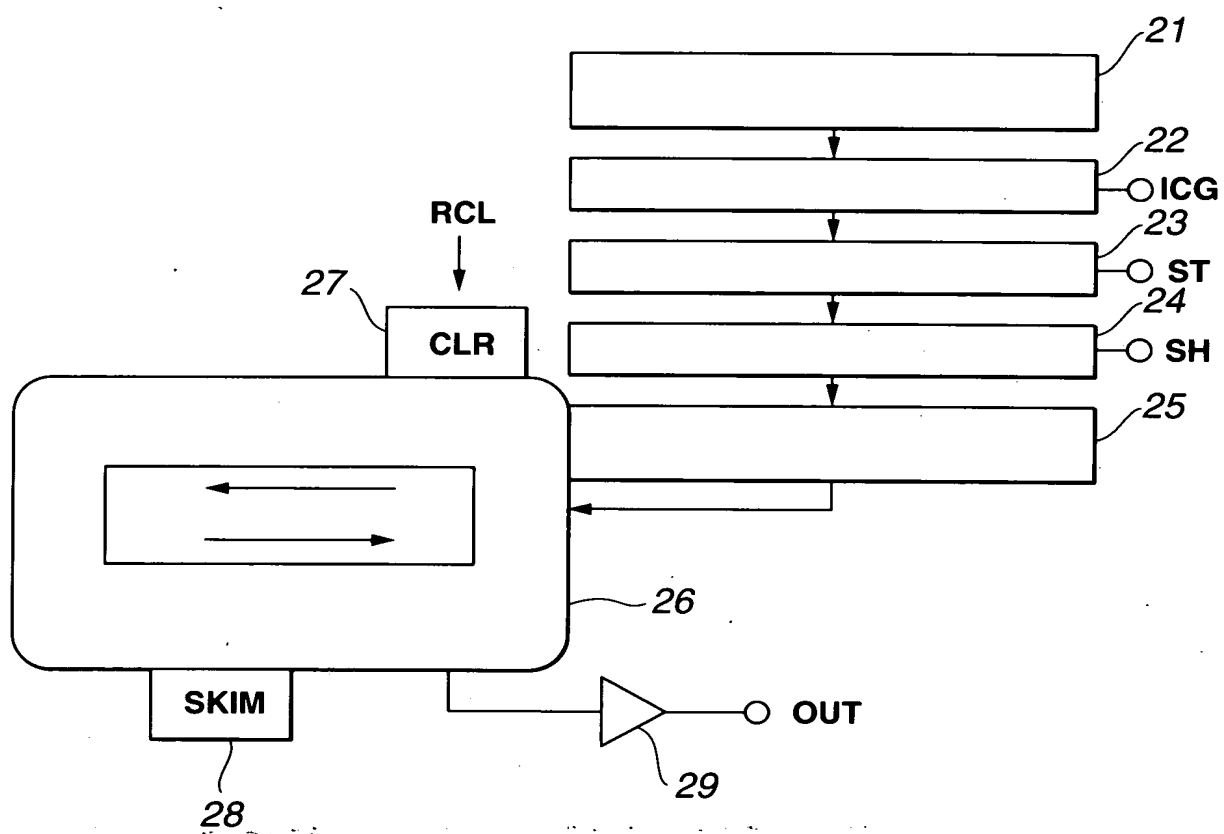


FIG.7


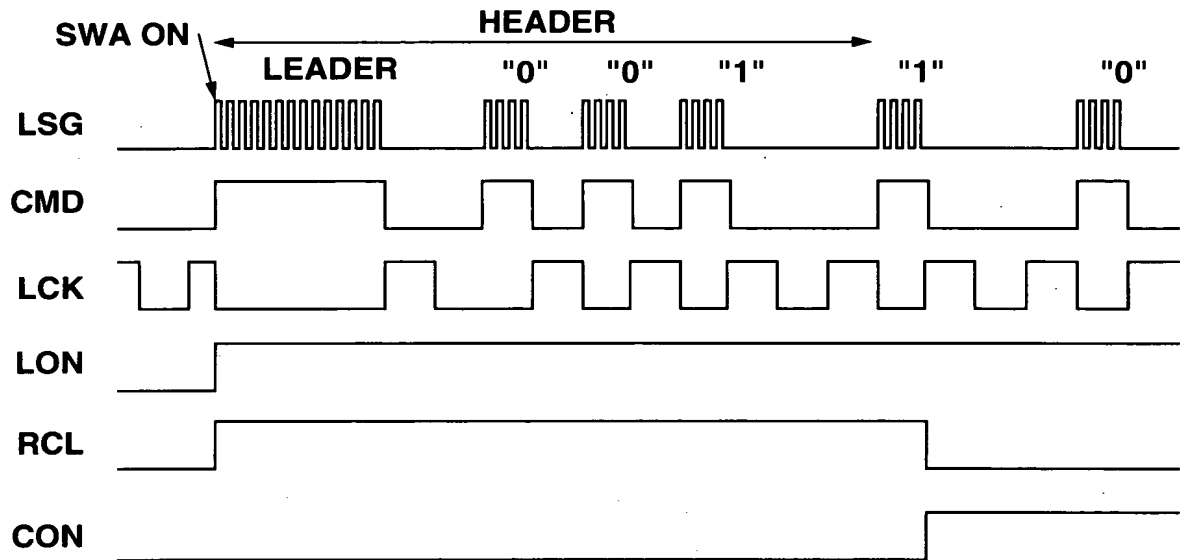


FIG.8

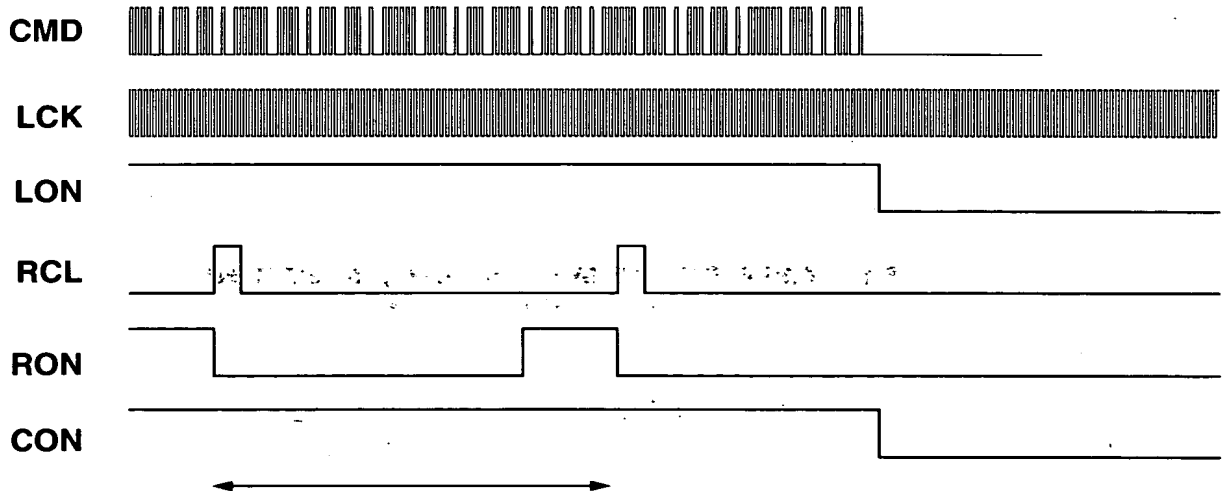

004120 12052560

FIG.9

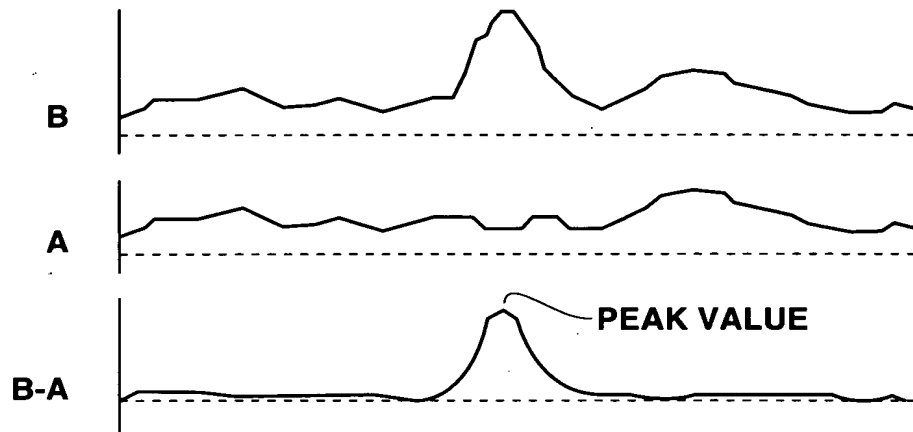


FIG.10

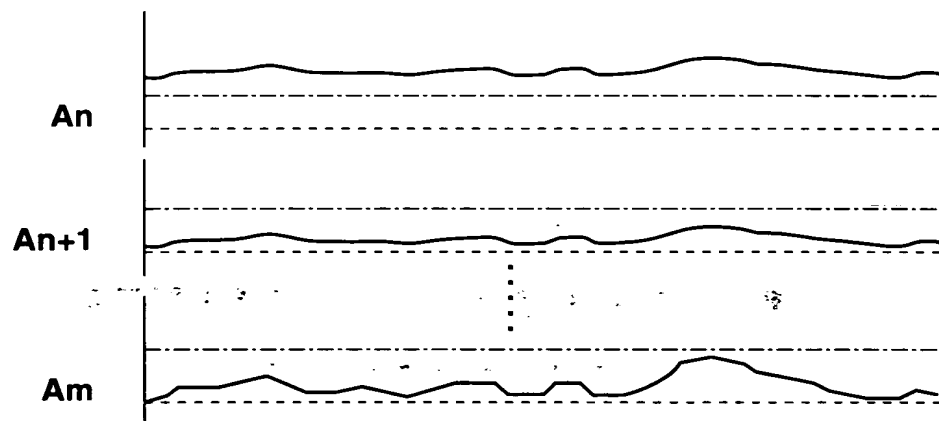


FIG.11


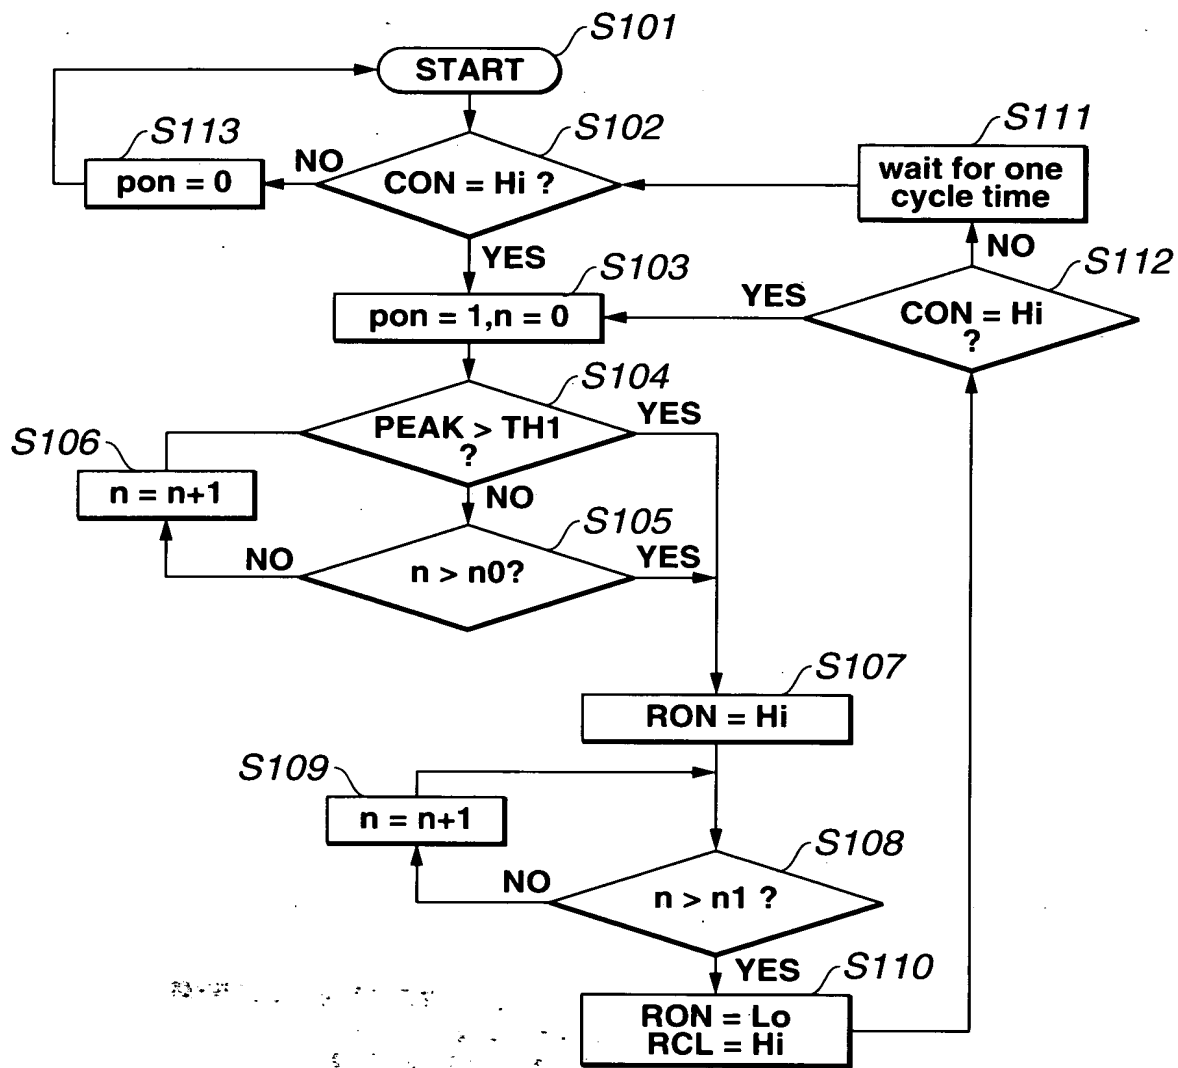


FIG.12

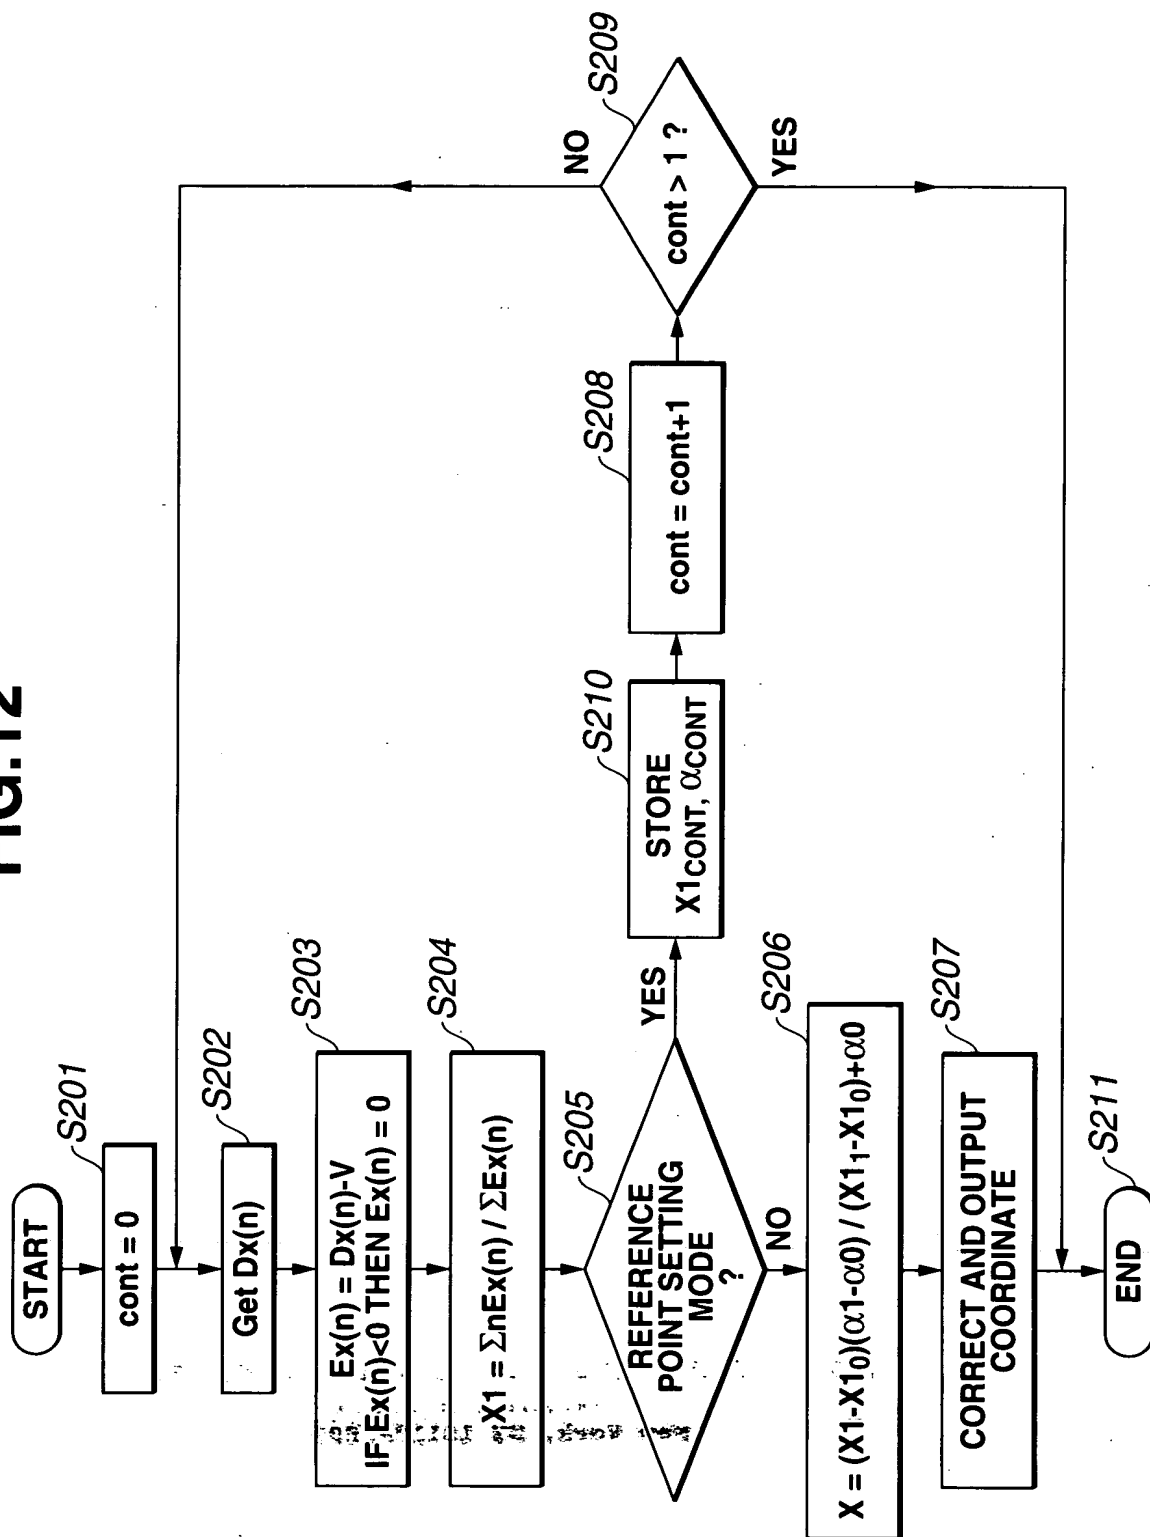

00525021 021400 004720 12052500

FIG.13

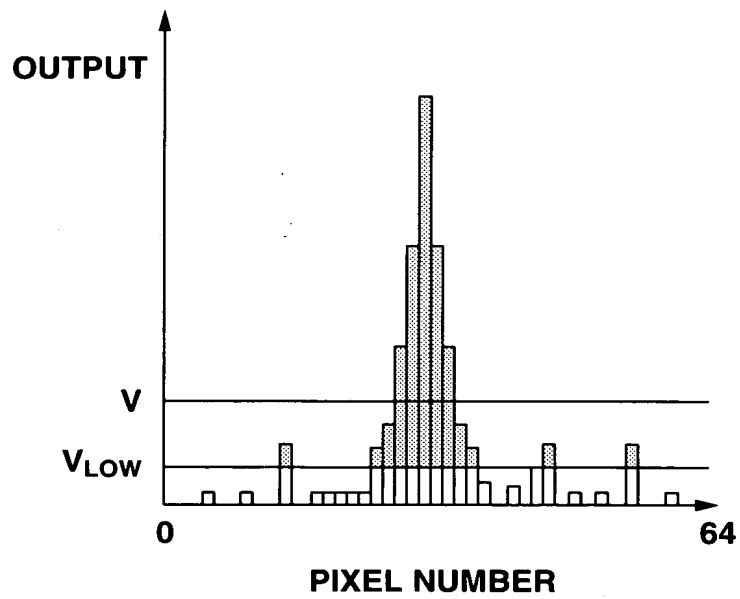


FIG.14A

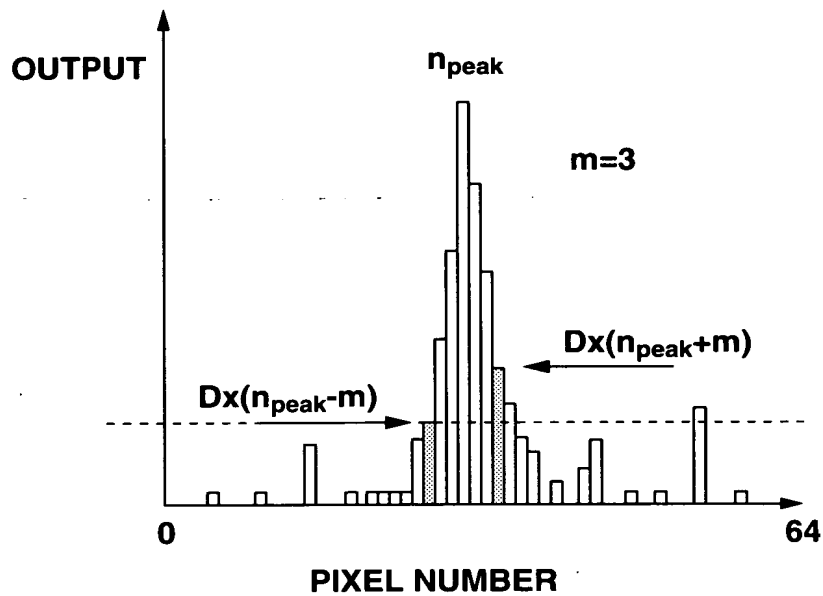


FIG.14B

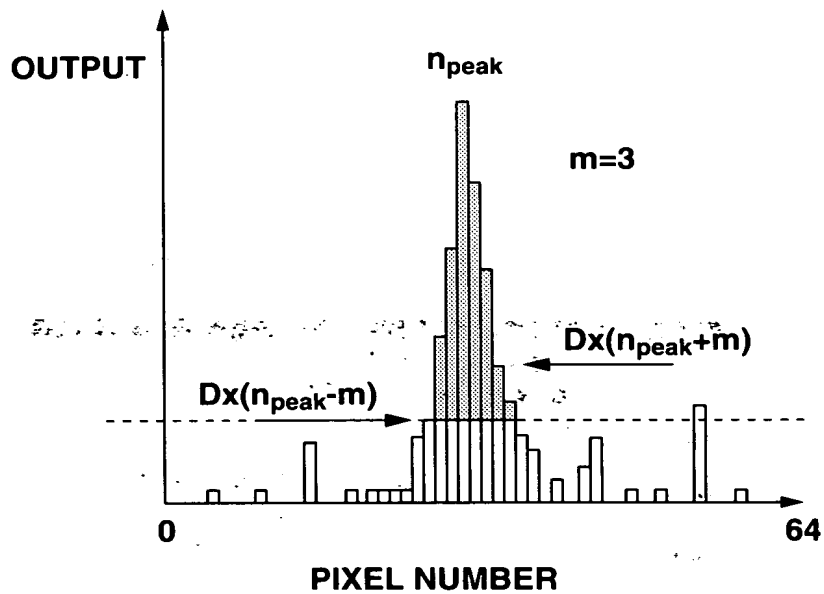


FIG.15

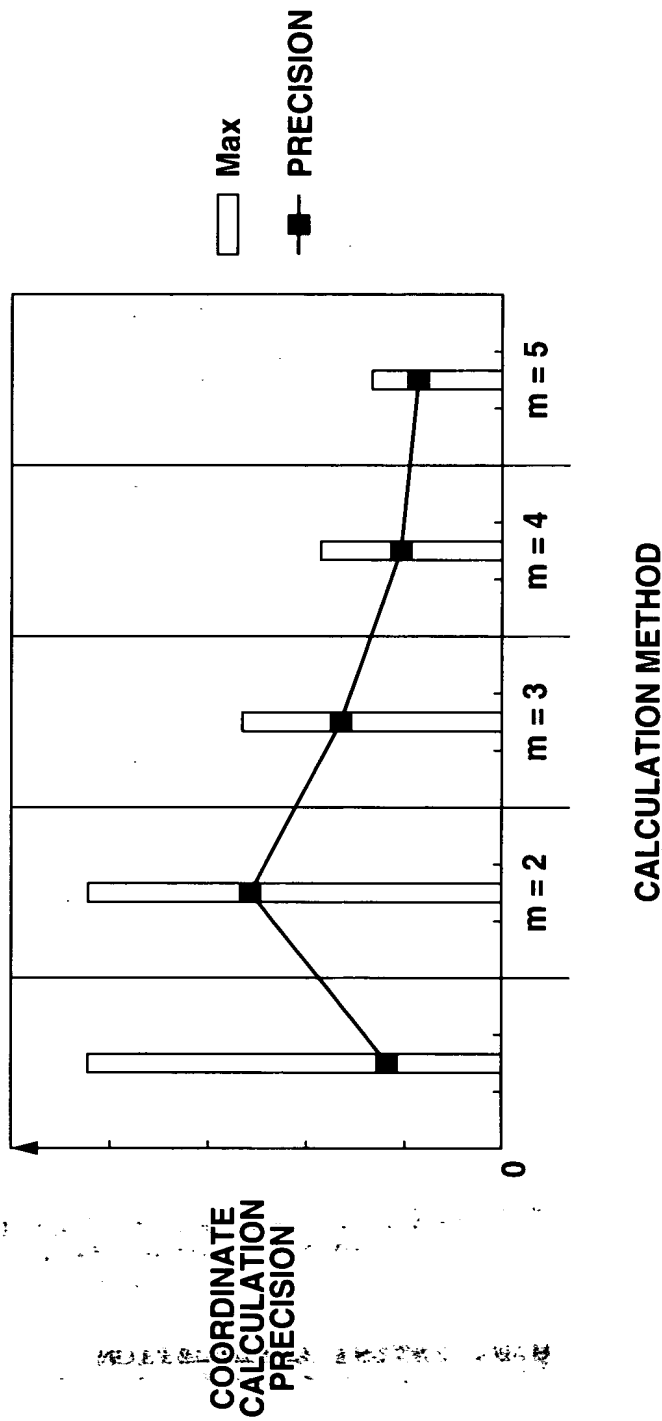


FIG.16

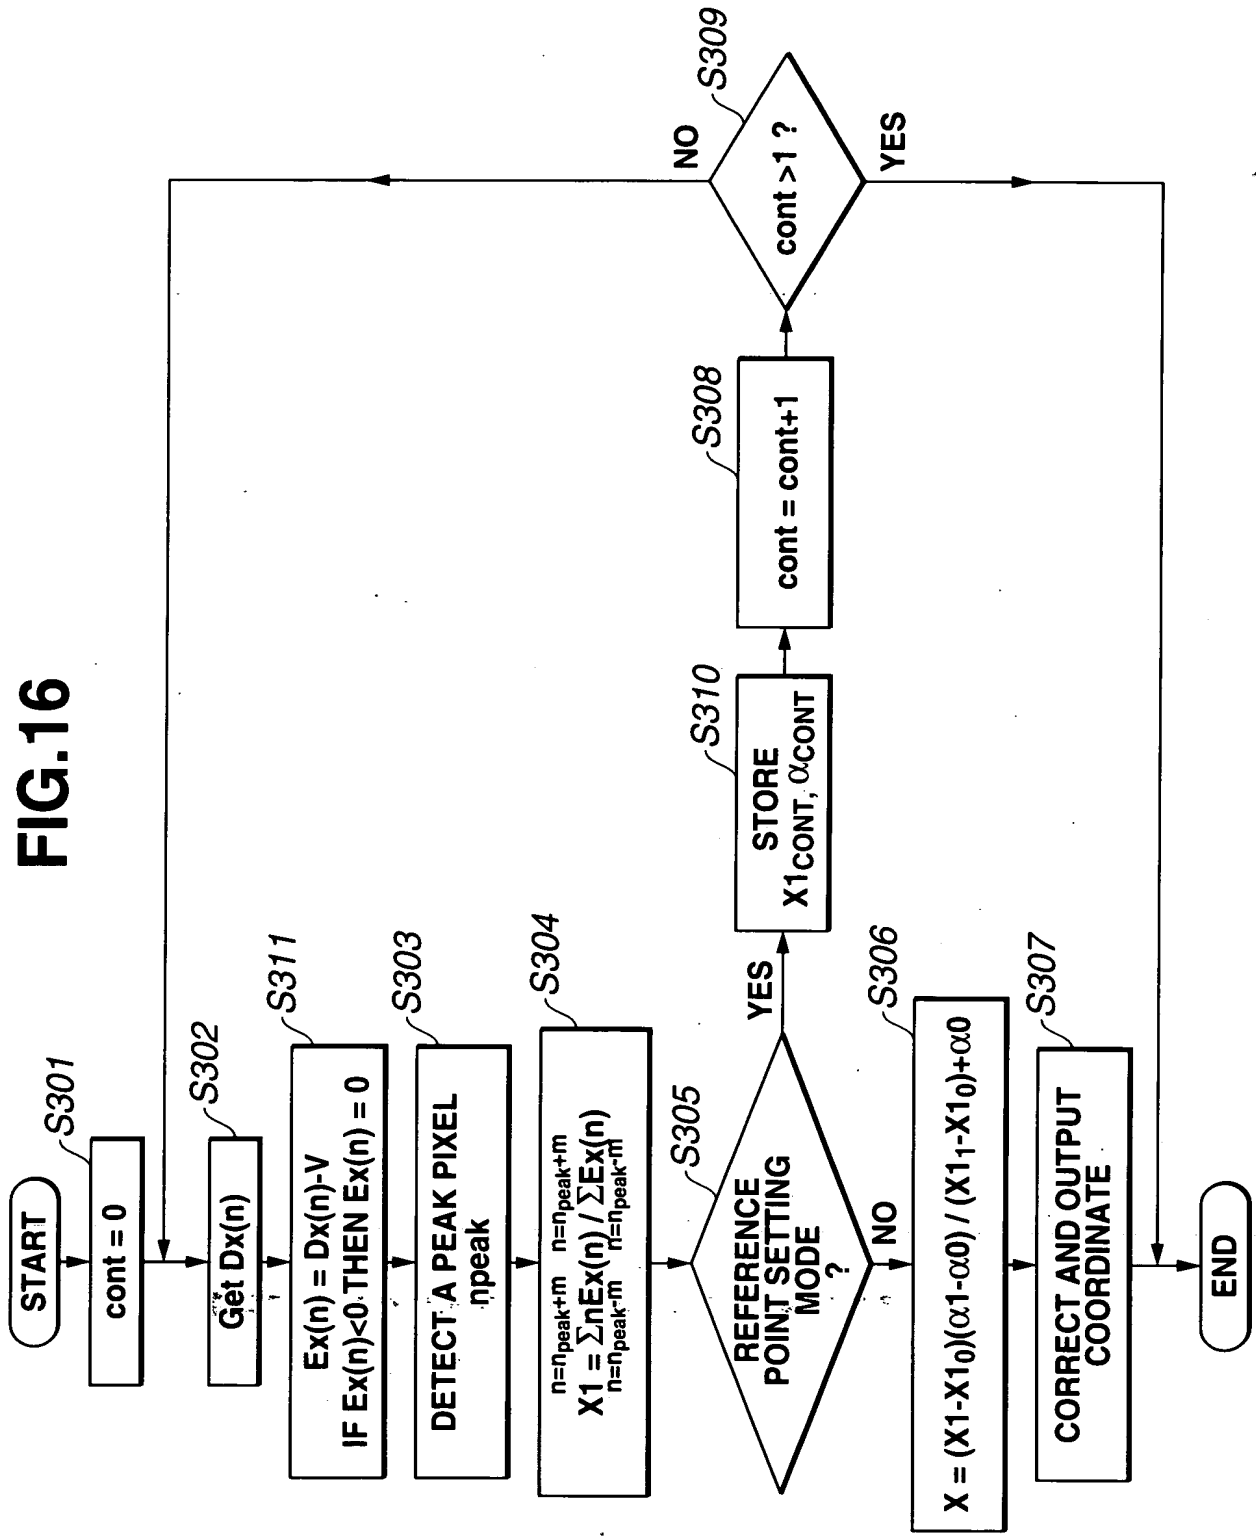


FIG. 17

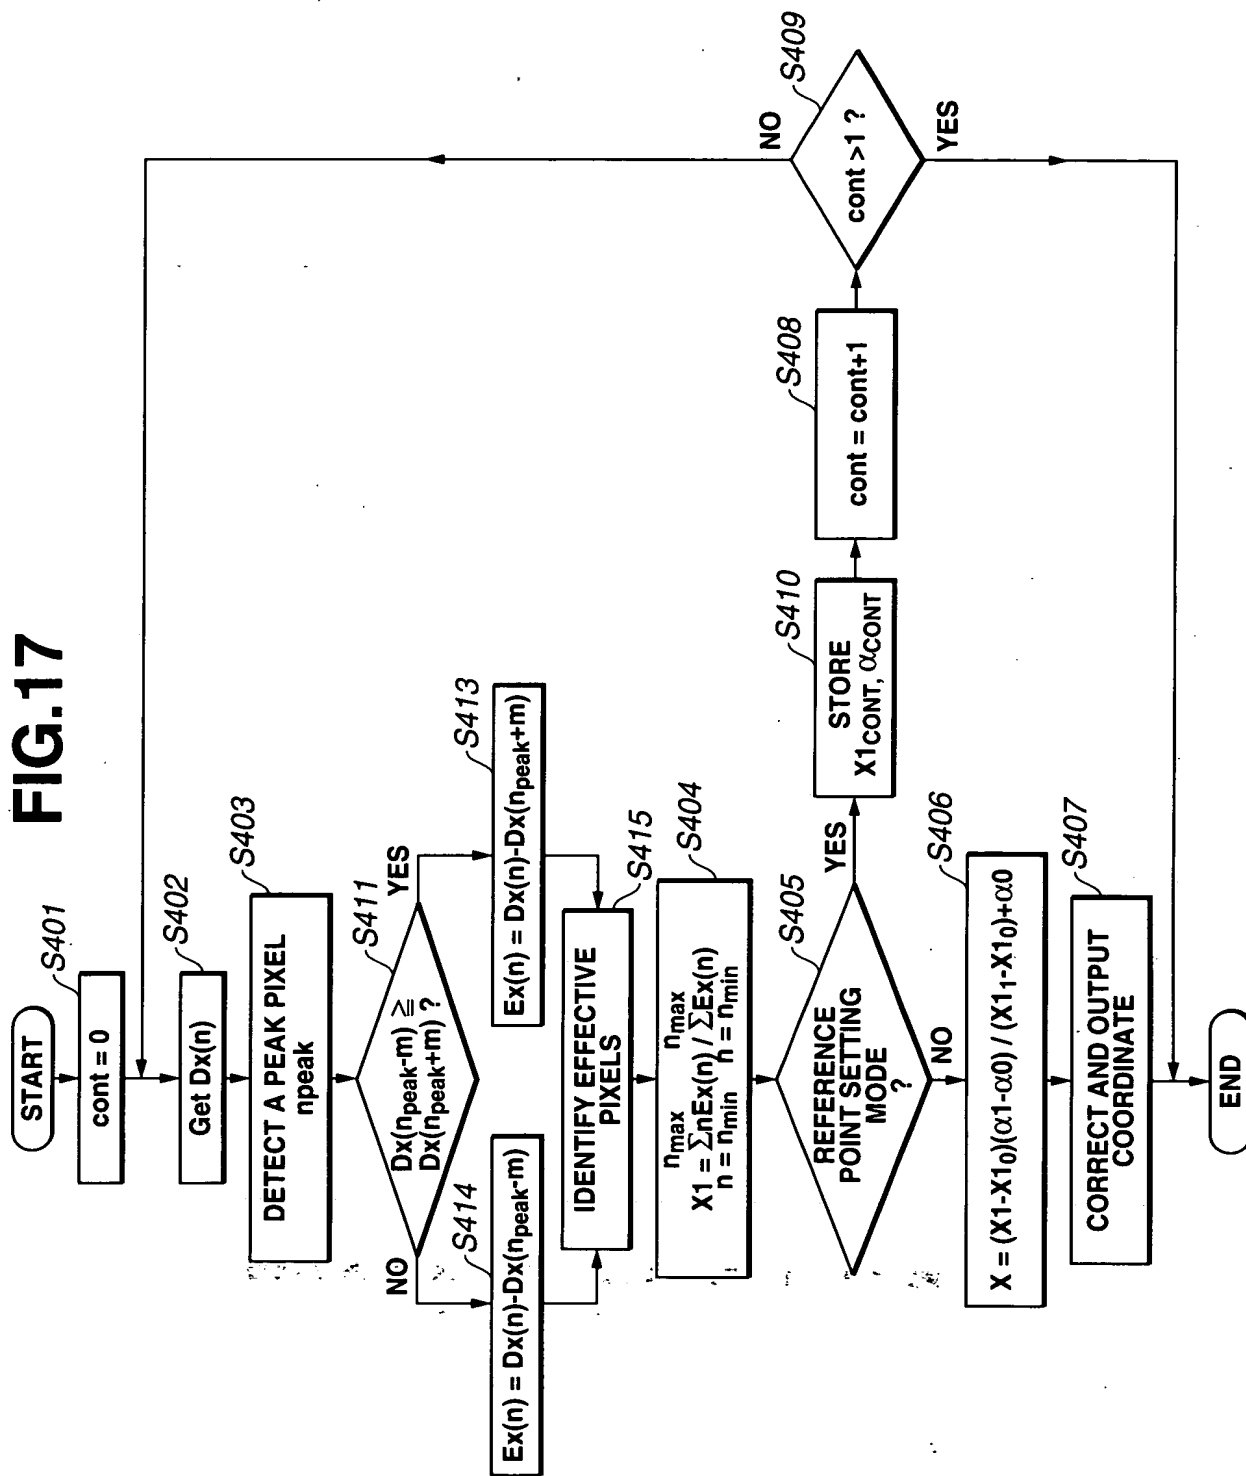


FIG.18

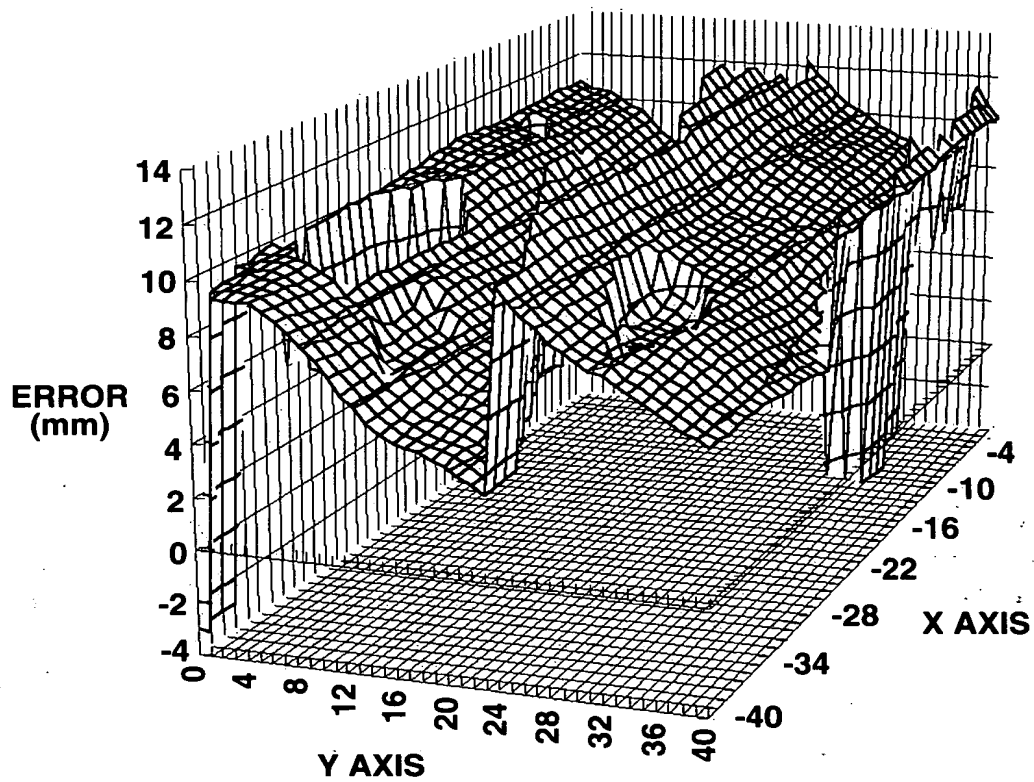


FIG.19

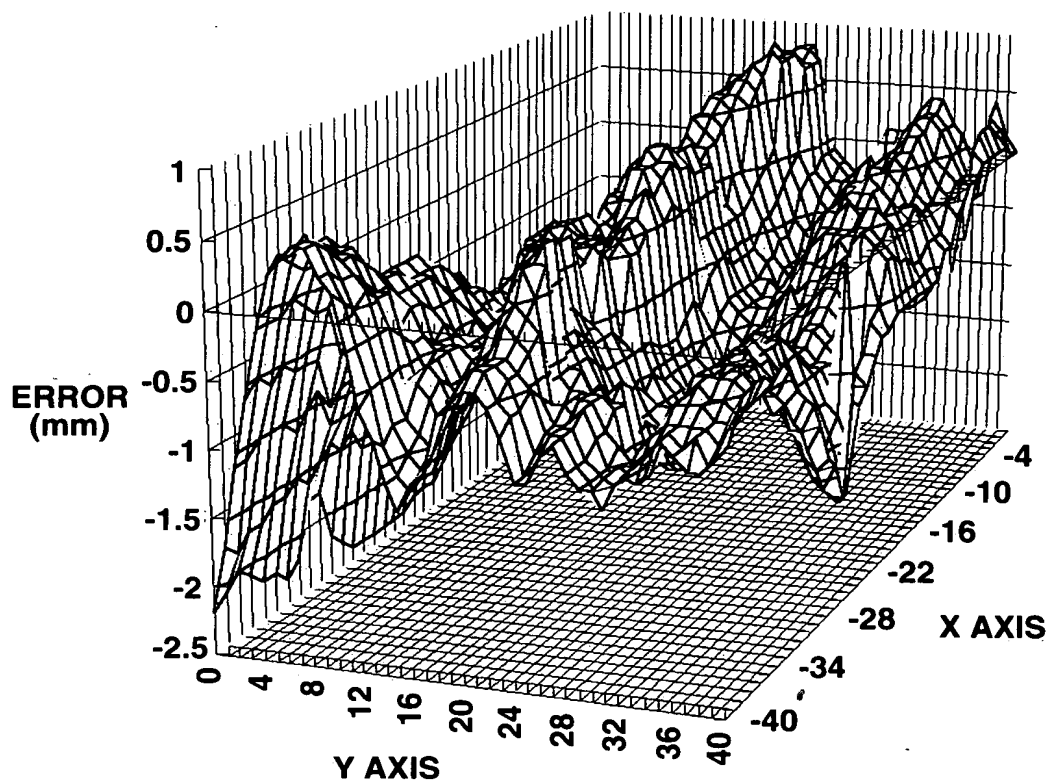


FIG. 20

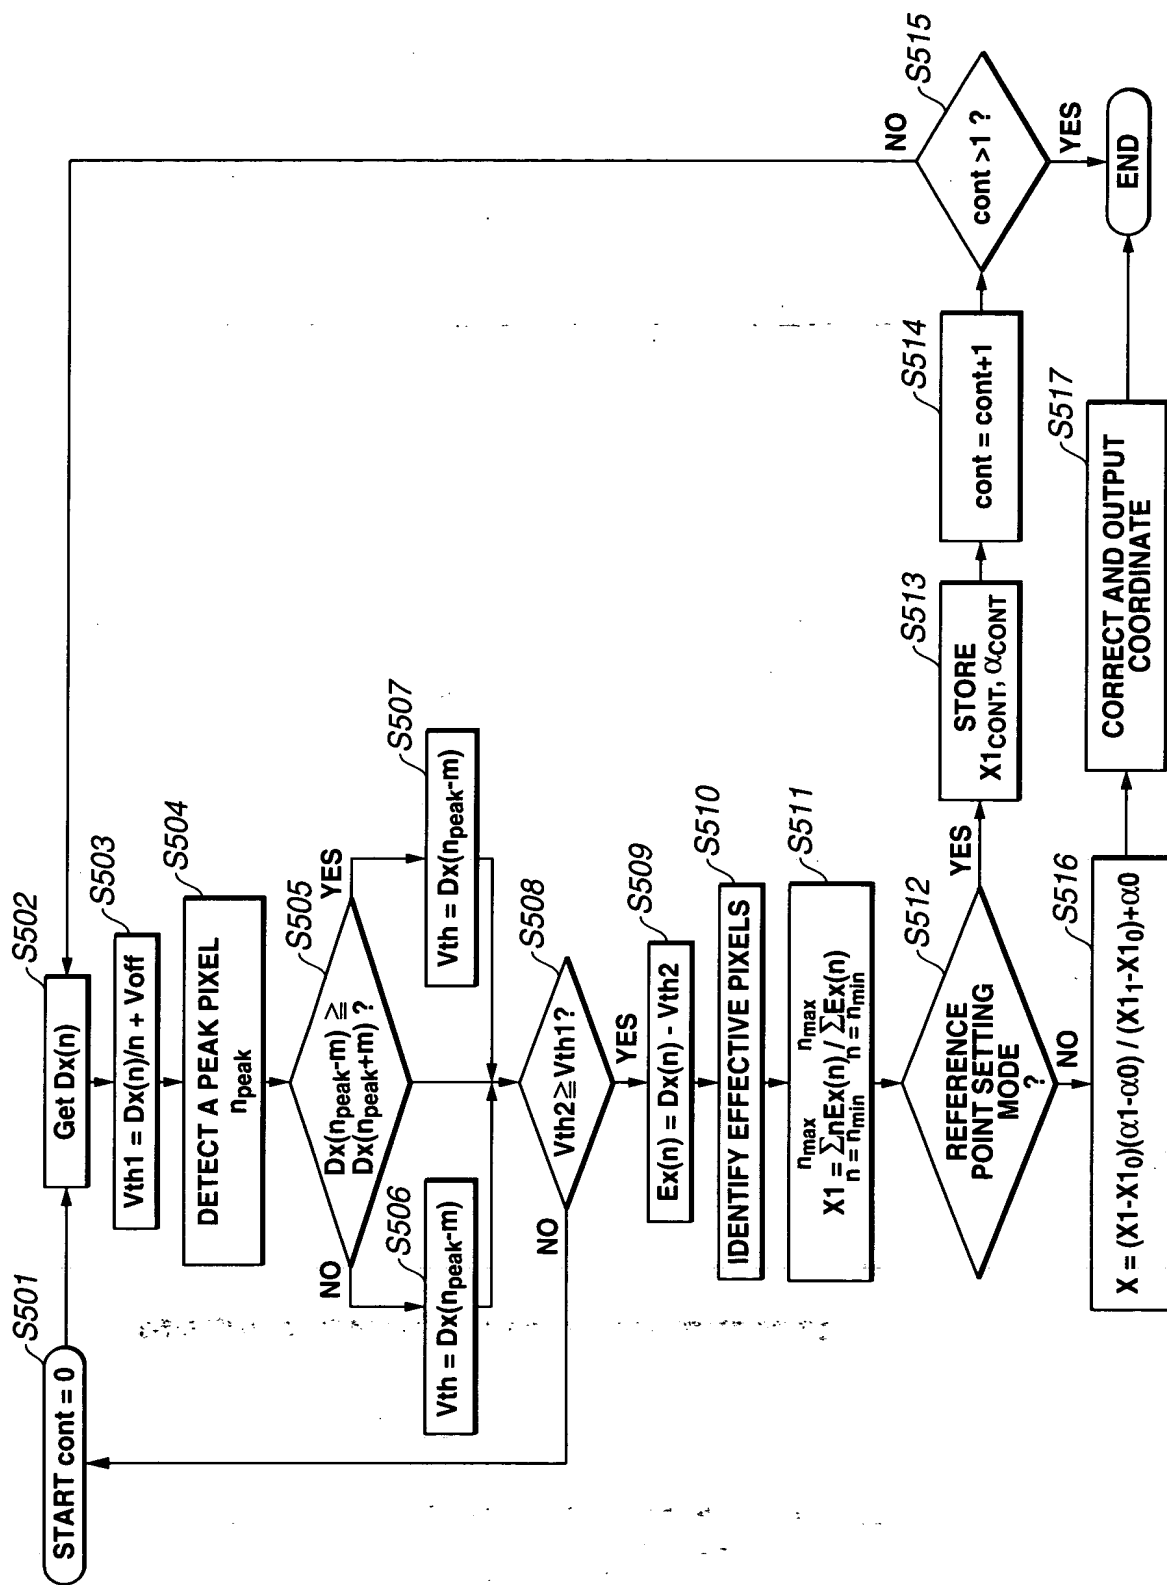


FIG.21A

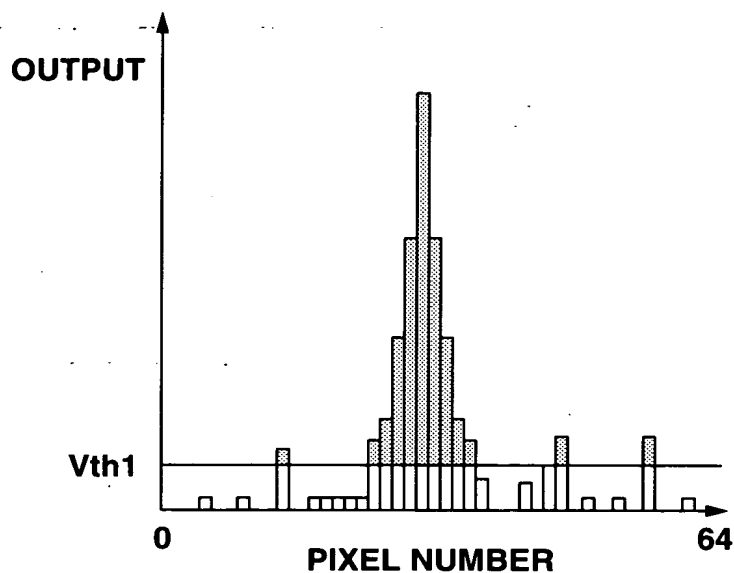


FIG.21B

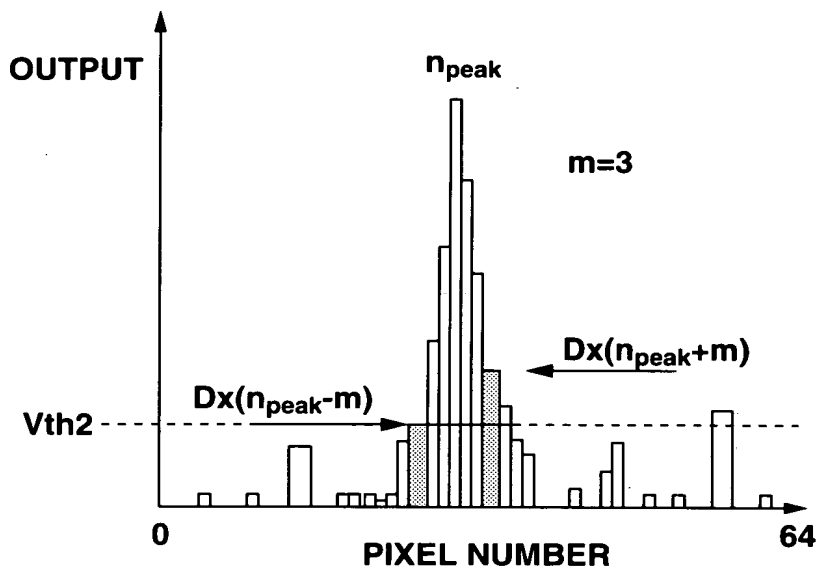


FIG.21C

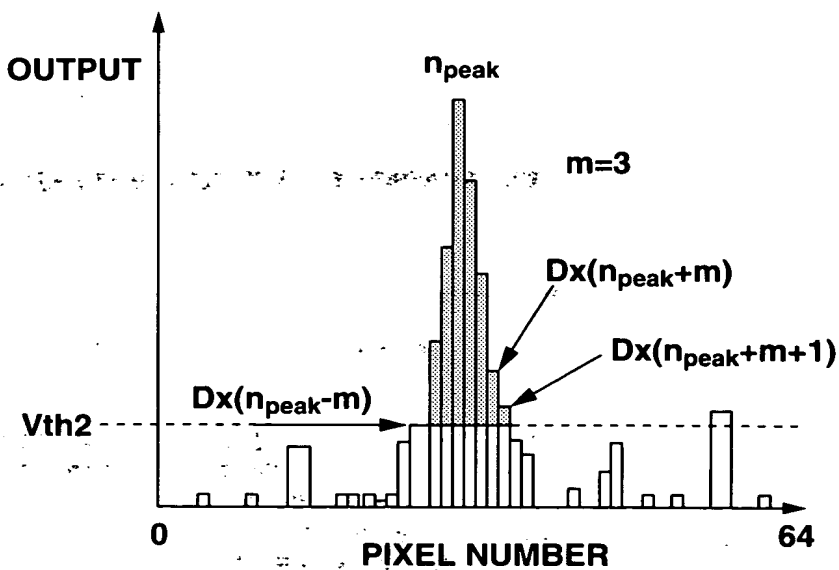


FIG.22

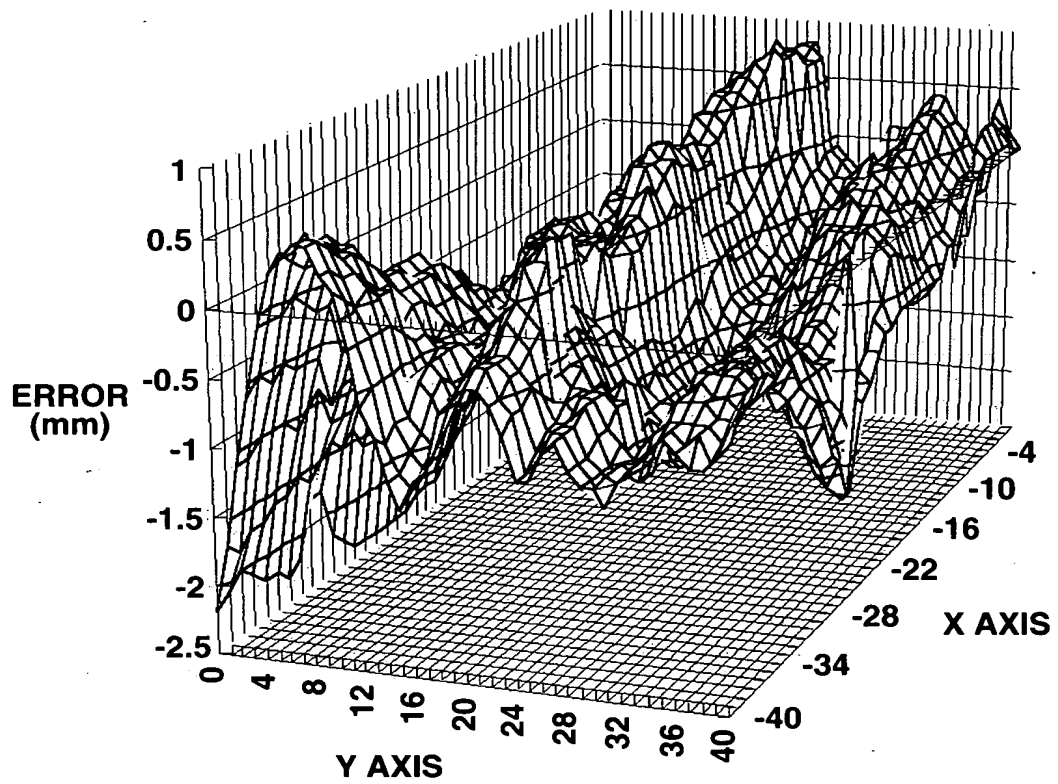


FIG.23

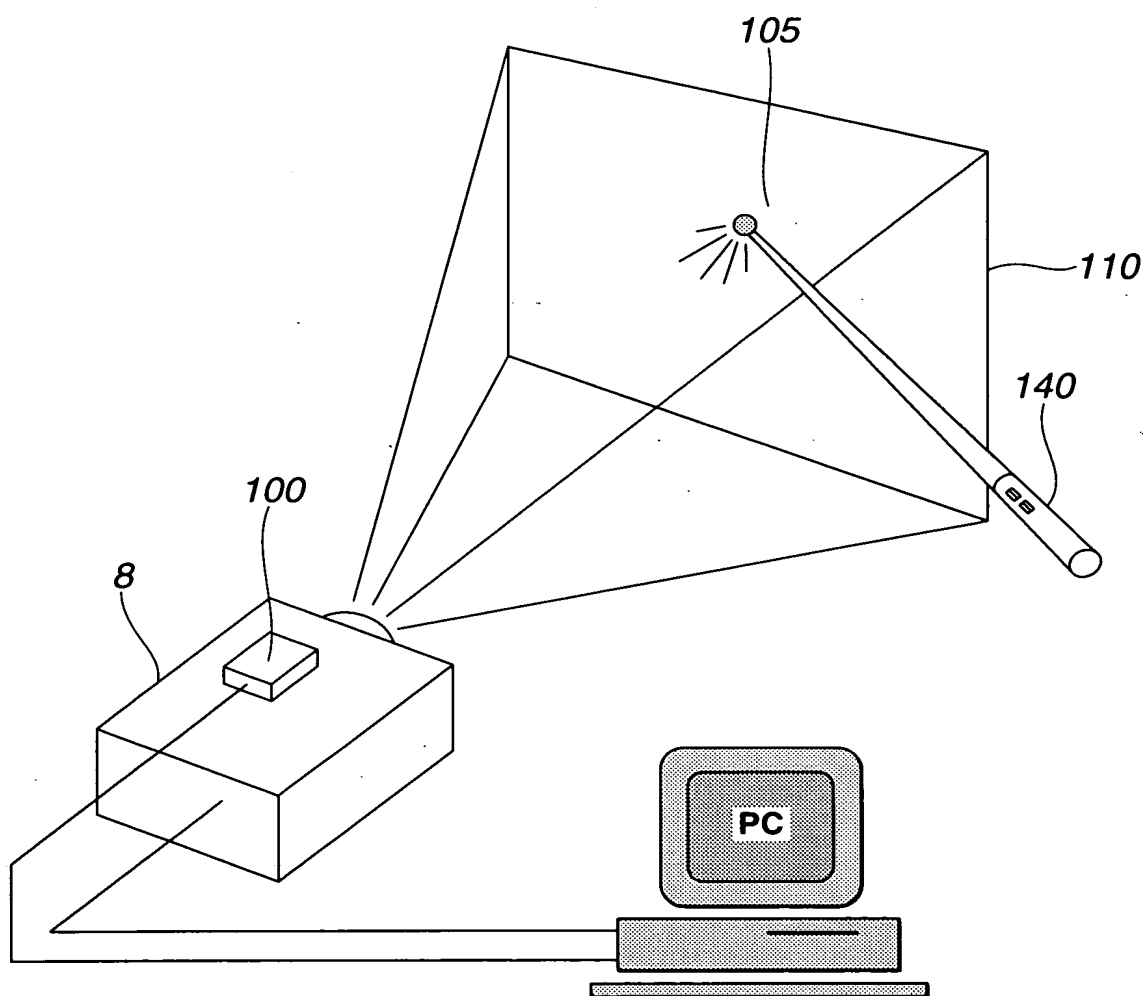


FIG.24

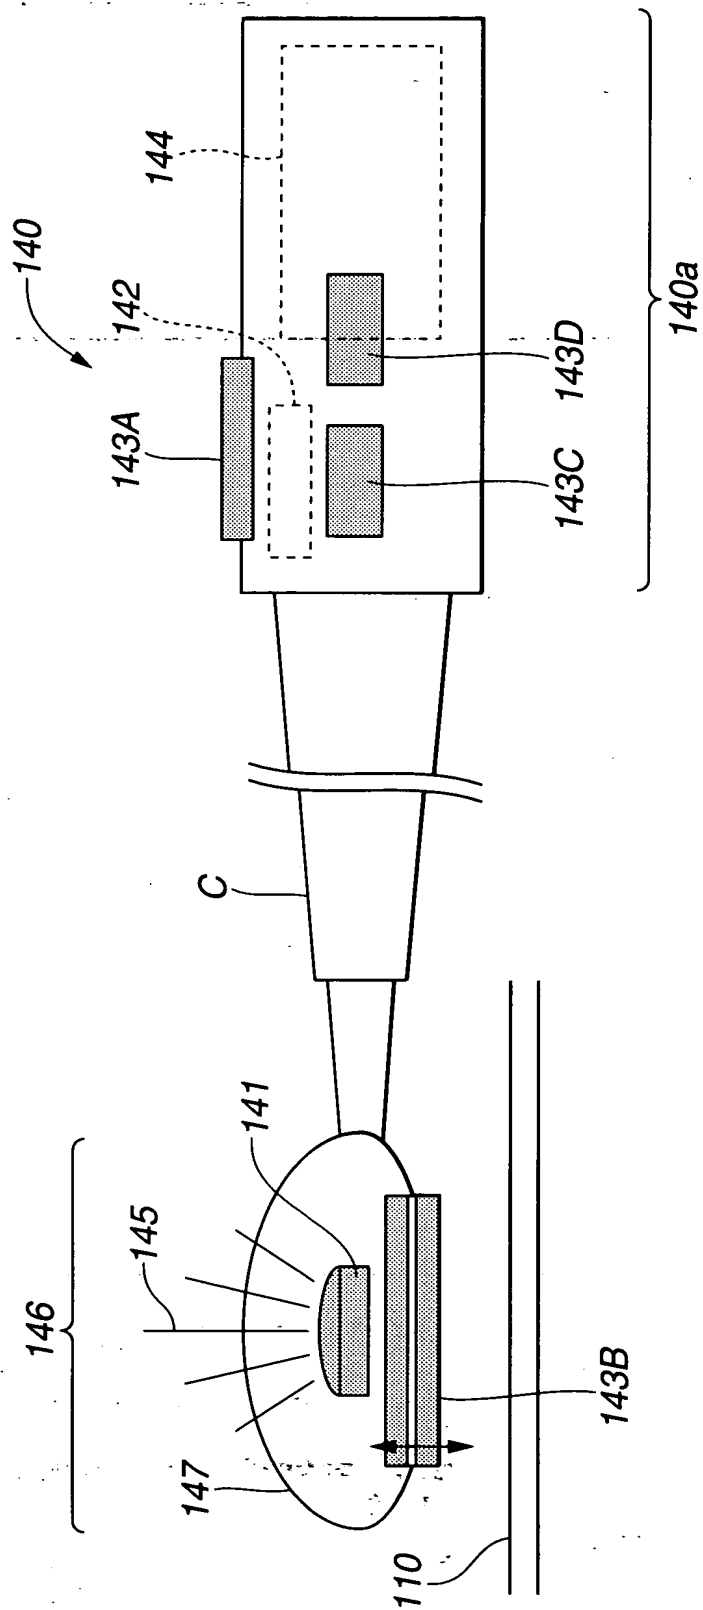


FIG.25

